

CONTROLLER INTRO AND EXPLANATION VIDEO



Your Enclosure Source®

Click this helpful video

A clickable icon is here when not printed

youtu.be/QvTrZ7hWwUI

Thermal Management Controller cheat sheet

For more details please refer to your part user manual or for more controller instructions watch the video linked above.

Icon	Function	Description
1	Compressor relay active	Flashes when activation is delayed or inhibited by protection times, external disabling, or other procedures in progress
2	Alarm relay active	
3	Heater relay active	
4	Ambient blower relay active	
⚠	Alarm	Flashes when alarms are active
↕R↕	Heating mode	Signals operation of unit in heating mode
↕D↕	Cooling mode in progress	Signals operation of unit in cooling mode
TEST	Test mode in progress	Activated only by manual procedure

- Compressor and ambient blower relay test - Hold Set + ▲
- Alarms and heater relays test - Hold Set + ▼
- Setting cooling set point (St1) - Hold Set
- Setting heating set point (St2) - Slow press Set twice
- Setting temperature units (P1) - Hold Prg and scroll