



PANEL SUPPORT FOR RACK ANGLES

SECTION VIEW:
INSIDE L.H. WALL OF
WORKSTATION ENCLOSURE

SCE-PSK24
SCE-PSK32

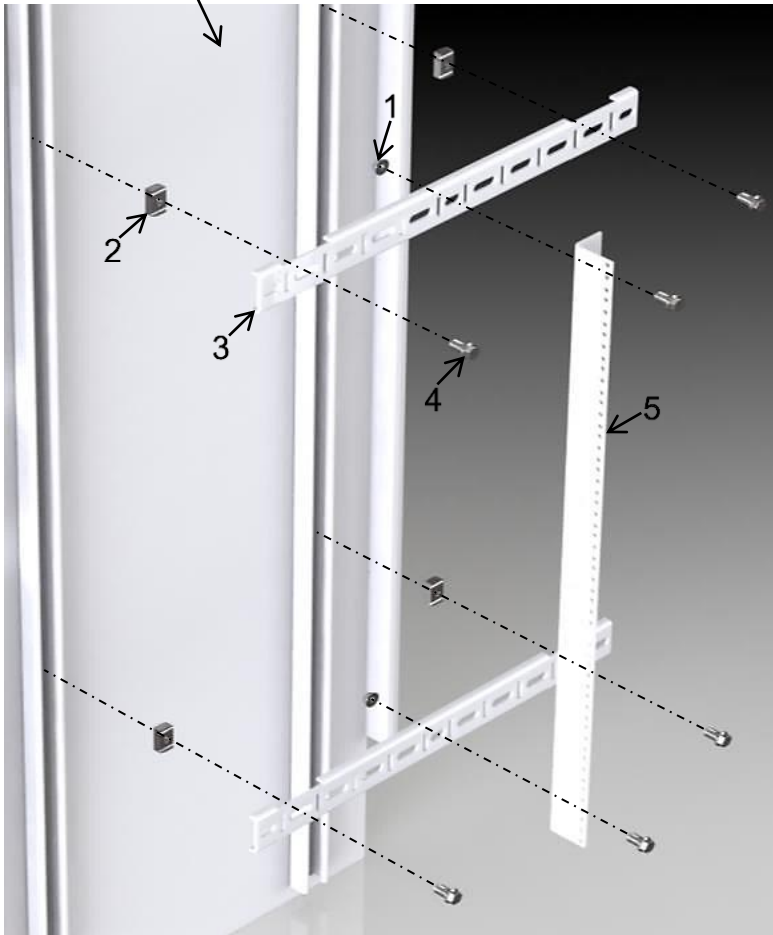

 EXPLODED VIEW



ASSEMBLED VIEW

INSTALLATION INSTRUCTIONS

1. INSTALL (4) CHANNEL NUTS (ITEM 2) INTO CHANNELS PROVIDED ON THE RIGHT AND LEFT SIDE OF ENCLOSURE.
2. ATTACH THE PANEL SUPPORTS (ITEM 3) TO THE CHANNELS AS SHOWN, USE SCREWS (ITEM 4) TO SECURE THE PANEL SUPPORTS TO THE ENCLOSURE.
3. ADJUST THE PANEL SUPPORTS TO THE DESIRED HEIGHT AND TIGHTEN SCREWS SECURELY.
4. INSTALL THE OPTIONAL (RA) OR (RP) RACK ANGLES (ITEM 5) AS SHOWN.

| ITEM # | PART NAME | QTY. |
|--------|-------------------------------|--------------|
| 1 | 3/8-16 FLANGE NUT | 4 |
| 2 | 3/8-16 CHANNEL NUTS | 8 |
| 3 | PANEL SUPPORTS | 4 |
| 4 | 3/8-16 X 1 HEX HEAD SCREW | 8 |
| 5 | SCE-72RP24F6 (RP) RACK ANGLES | NOT INCLUDED |
| | SCE-72RA24F6 (RA) RACK ANGLES | NOT INCLUDED |