


Door Alignment


Single & Two Door Wall Mount

(Wall Mount Single & Two Doors) If the enclosure is mounted to a surface that is not flat, the door may not align, seal or open and close properly. If doors do not align evenly across the top and bottom or meet evenly, place metal shims between the mounting foot and the wall or mounting surface.

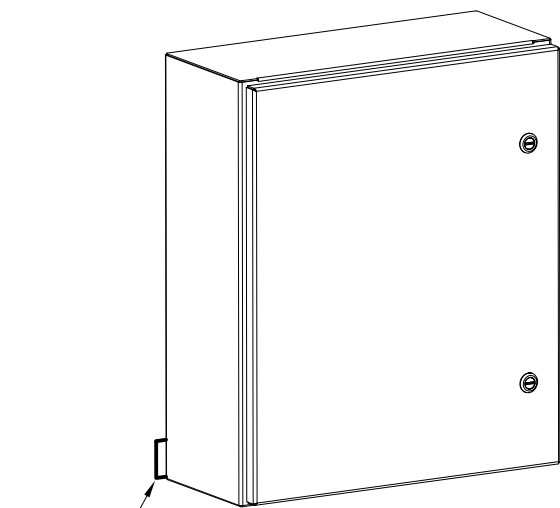


Shim/s

Door Low
Latch Side

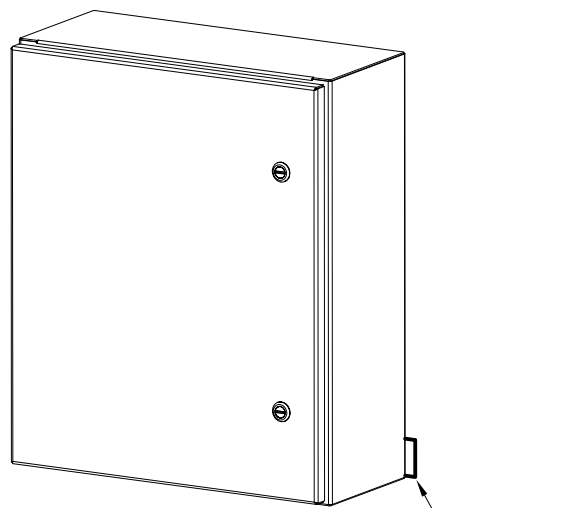


Shim/s

Door High
Latch Side

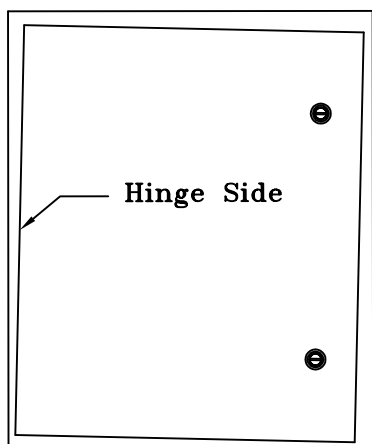

Hinge Side

Door Low
Latch Side

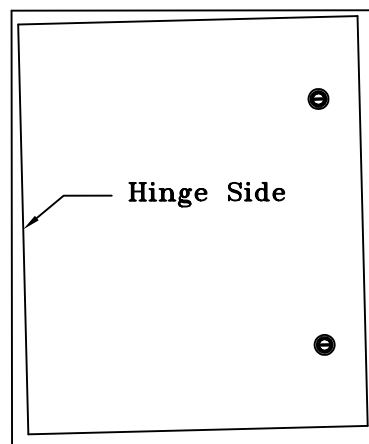

Hinge Side

Door High
Latch Side

Door Alignment

Floor mounted Two Door with center post & Overlapping Doors

(Floor mounted Two Door with center post & Overlapping Doors) Doors are fitted to meet evenly. If doors do not meet evenly, place metal shims under the corners of the enclosure. Shims under the right front corner will raise the right door; shims under the left front corner will raise the left door. It is important that the doors meet evenly to insure a proper seal against liquids and dust.

