



SAGINAW CONTROL & ENGINEERING SCE-GA14X1 REPLACEMENT GASKET INSTALLATION

Replacement gasket installation instructions:

1. Existing gasket must be removed from the door.
2. Wipe the application area with a clean dry rag to remove debris.
3. Apply the gasket to the top and bottom of the door first as shown.
4. Apply the left and right side gasket tightly against the top and bottom gaskets as shown, locating the hinge side gasket as shown.

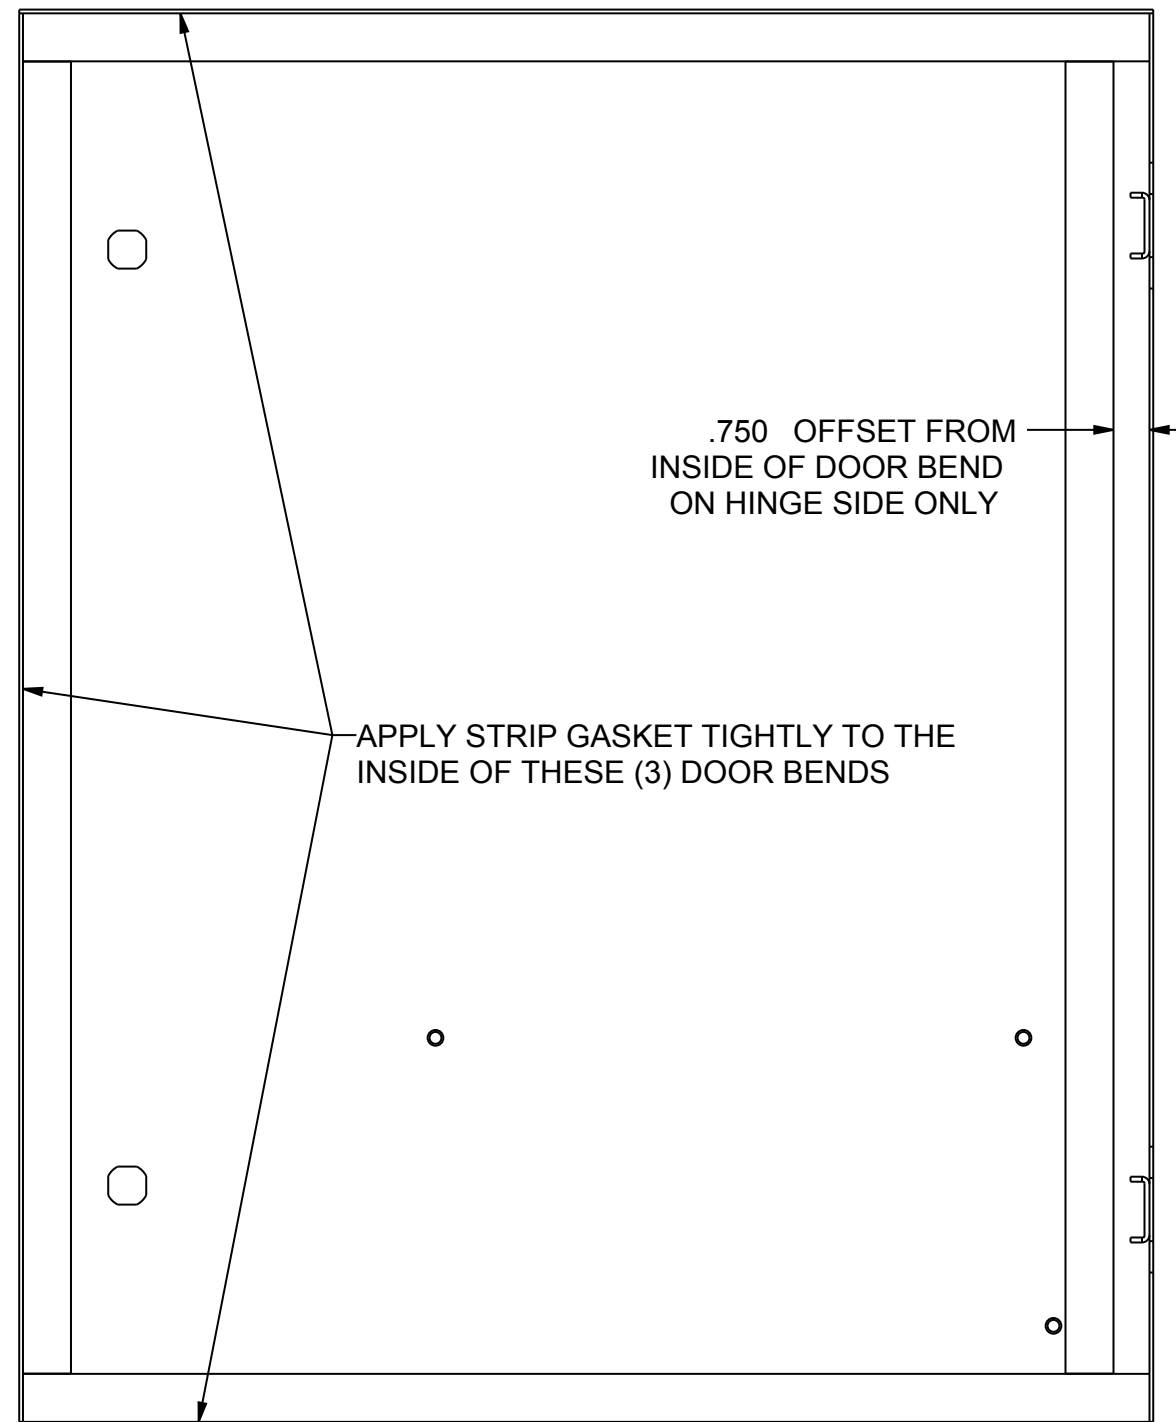

DOOR INTERIOR VIEW
(GASKET APPLICATION)

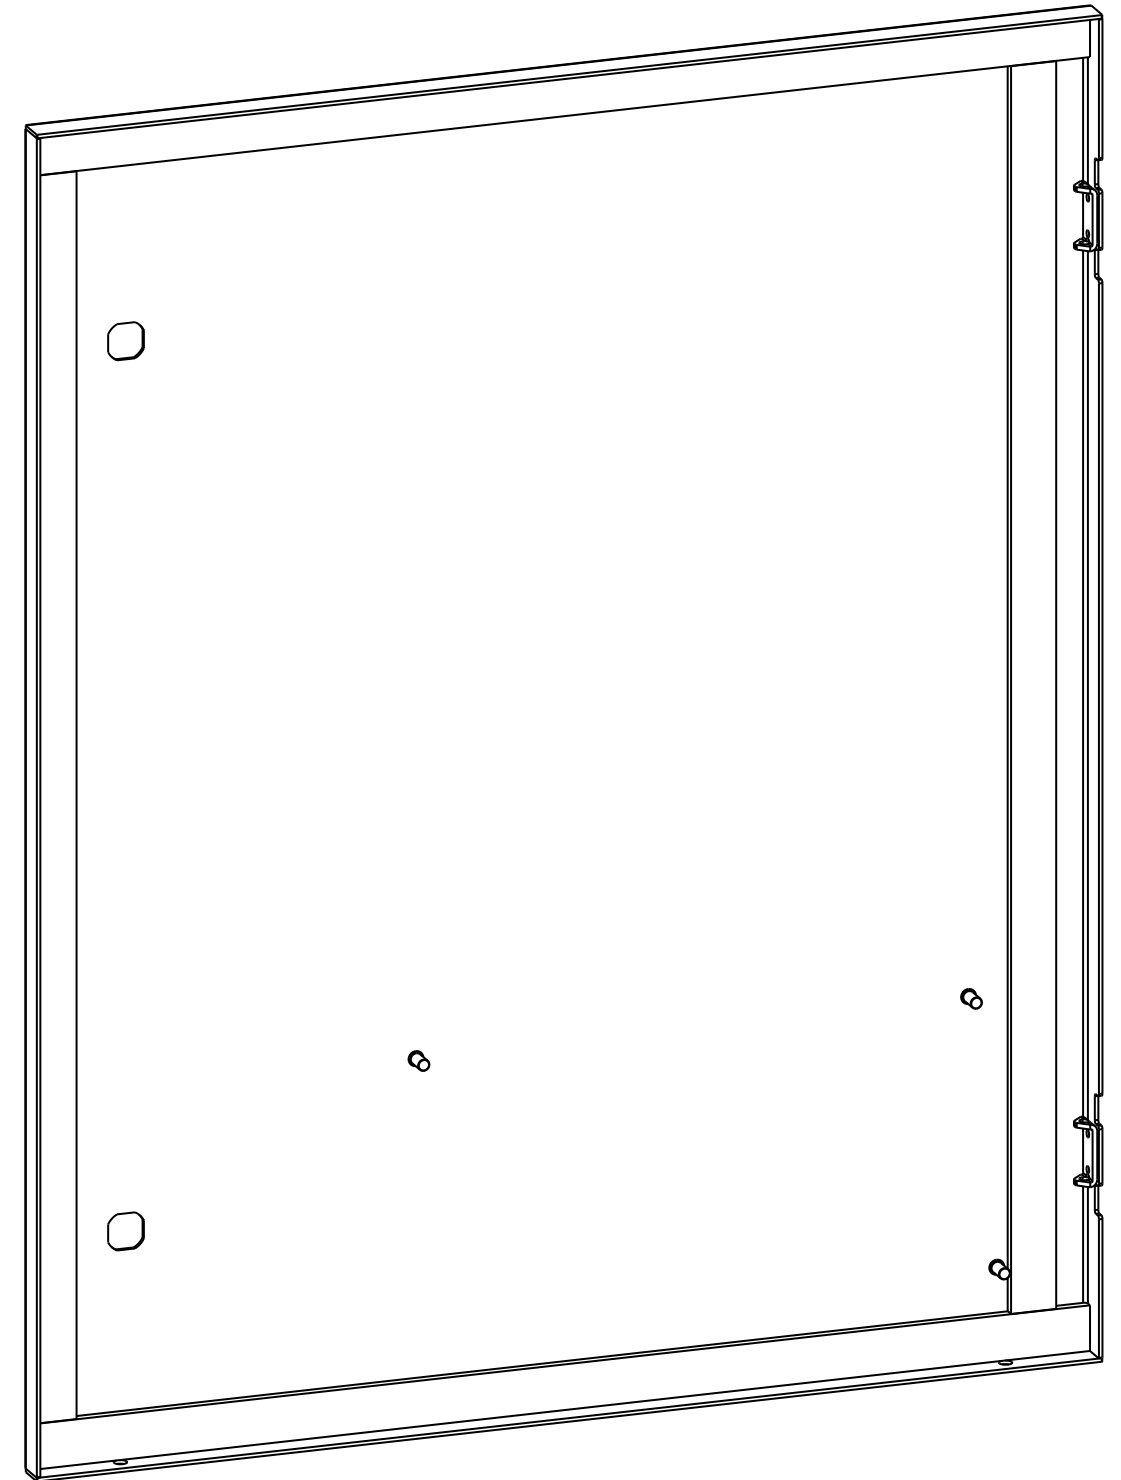

DOOR ISOMETRIC VIEW