
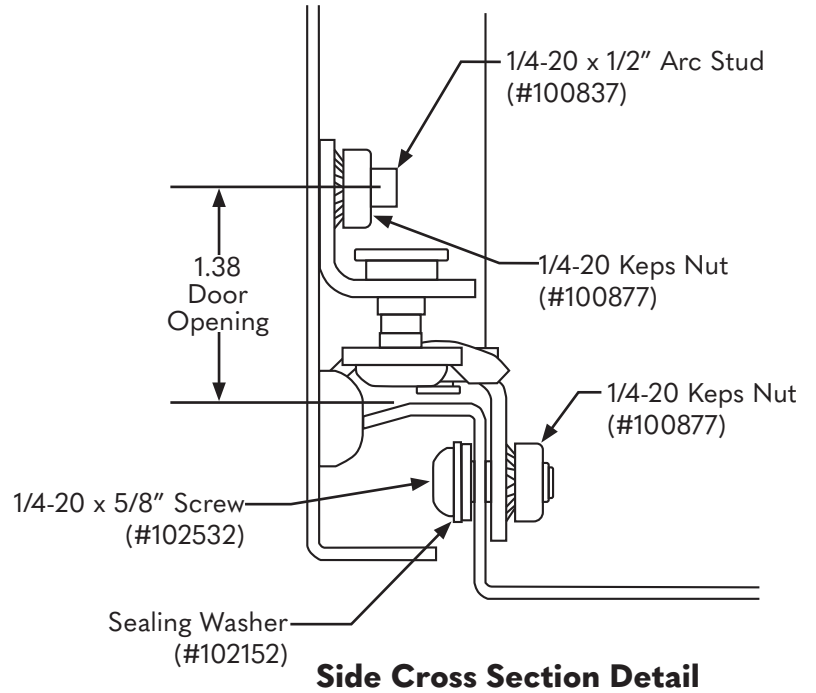


STANDARD DOOR STOP INSTALLATION INSTRUCTIONS

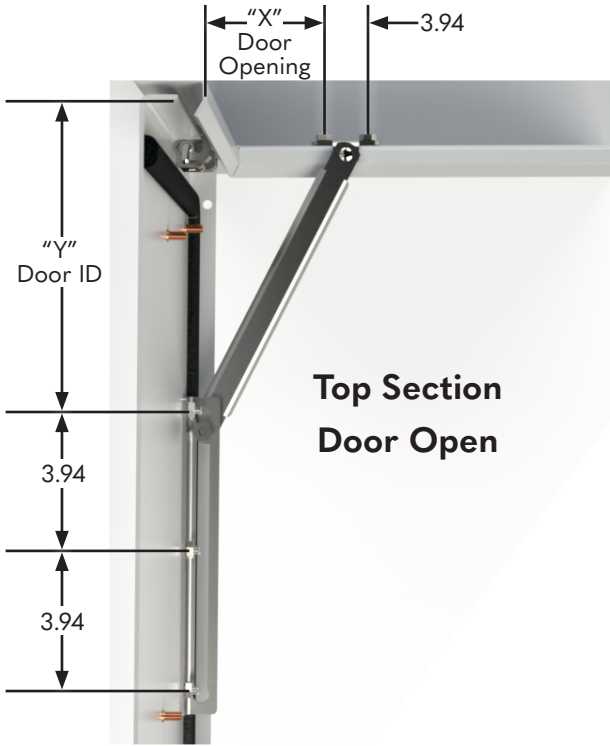

Large Concealed Hinge		
Opening Angle	"X"	"Y"
90	2.45"	7.19"
105	2.45"	7.19"
120	2.45"	5.81"
135	2.45"	5.81"

Small Concealed Hinge		
Opening Angle	"X"	"Y"
90	2.45"	7.44"
105	2.45"	7.44"
120	2.45"	6.24"
135	2.45"	6.24"

Continuous Hinge		
Opening Angle	"X"	"Y"
90	2.45"	6.56"
105	2.45"	6.56"
120	2.45"	5.06"
135	2.45"	5.06"

