

NEXTGEN LIFTING LUG

Remove Existing Eyebolts

- Completely unscrew and remove each eyebolt assembly.
- Retain the required nut from the original eyebolt assembly for reuse.
- Ensure both threaded holes are clean and free of debris, old sealant, or damaged threads.


Prepare Mounting Surfaces

- Verify the two enclosures are pushed firmly together and properly aligned.
- Clean the exterior mounting surfaces around both eyebolt holes.
- Inspect surfaces to ensure they are flat and free of damage that could affect sealing.

Install the Lifting Lug

- Position the lifting lug so it spans across the two adjacent enclosure holes.
- Place the new sealing washer between the lifting lug and the exterior surface of the enclosure at the sealing location.
- Ensure it sits flat and is not twisted or pinched.

SCE-LLBNG Bill of Material	
Quantity	Part Description
4	Flanged Bolt
4	Sealing Washer
2	Lifting Lug

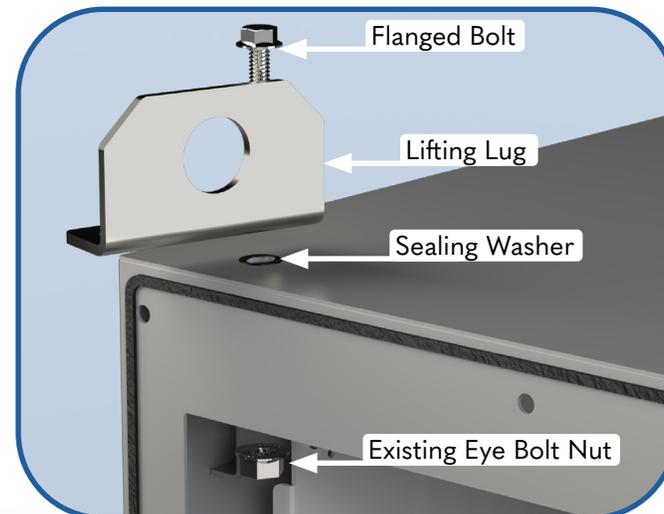

Your Enclosure Source®