


# SCE-7272\*\*ULP INSTALL SCE-72P72GALV

Step 1:  
Assemble SCE-72P72GALV  
per [galvanized subpanel detail](#)



Step 2:  
Rotate 90°

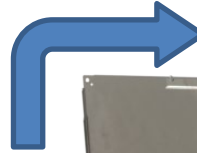

Step 3:  
Install

Due to center body brace  
subpanel's seam must  
go horizontal



SCE-7272\*\*ULP

SCE-72P72GALV

