


Disconnect Cutout Modification D1 to D2

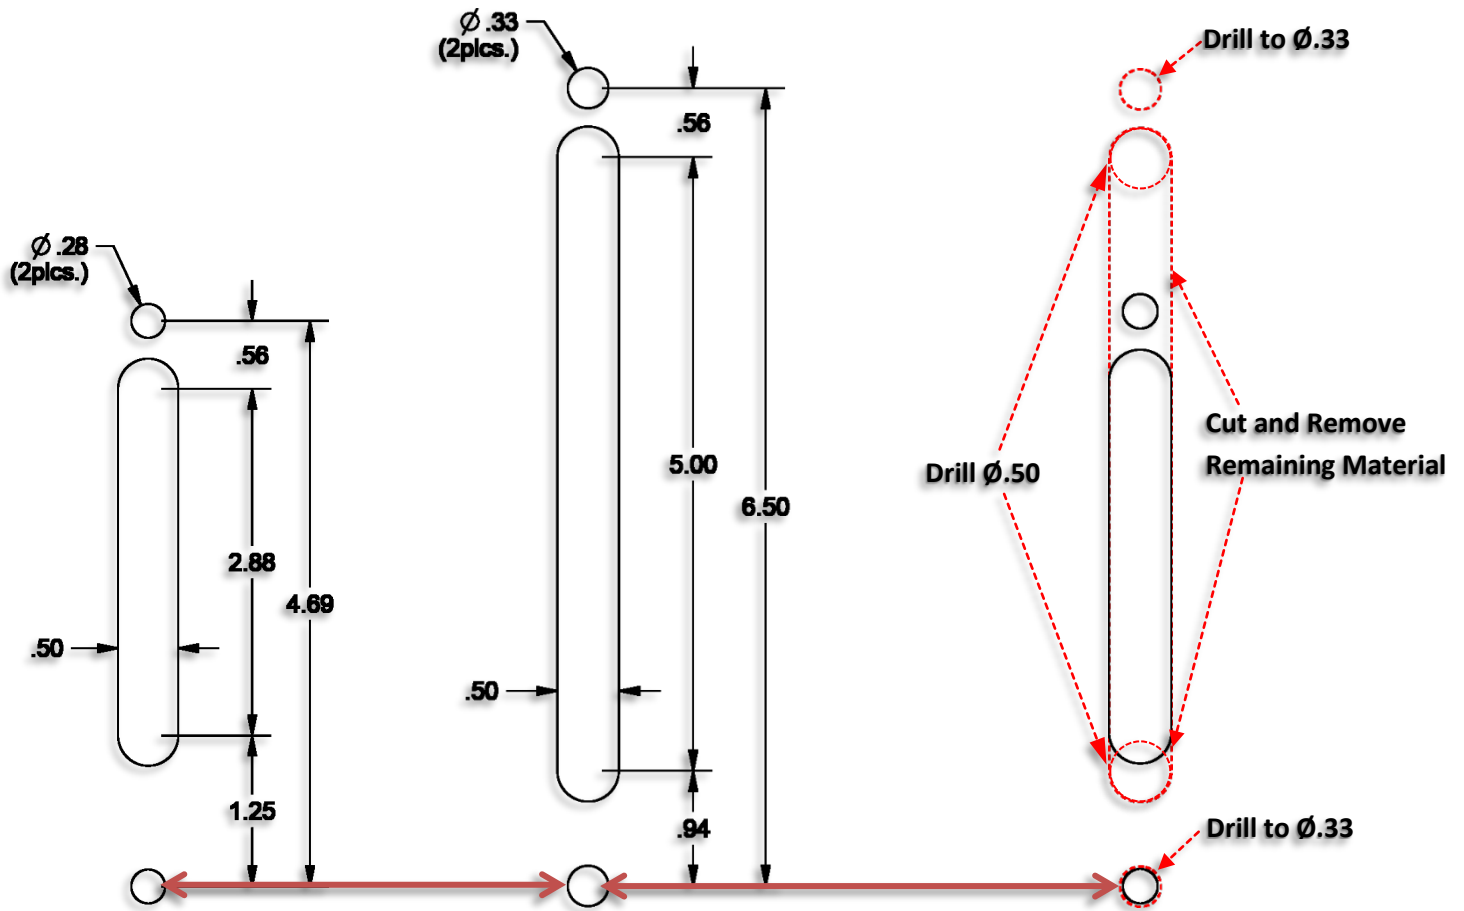

D1 CUTOUT

D2 CUTOUT

MODIFICATION

**SQ-D, AB, GE-TDA,
CUTLER-HAMMER,
ITE MAX FLEX
DISCONNECT OPENING**

**AB-V 400 AMP
DISCONNECT OPENING**

Modifications

To modify a D1 cutout to a D2, concentrically align bottom $\varnothing.28$ cutout on the D1 cutout to the location of the bottom hole of the D2 cutout. Defeater studs are correctly located using this bottom hole.

*Purchase of a SCE-MDV400 recommended