


EL LP ≤ 20 " DEADFRONT



Your Enclosure Source®

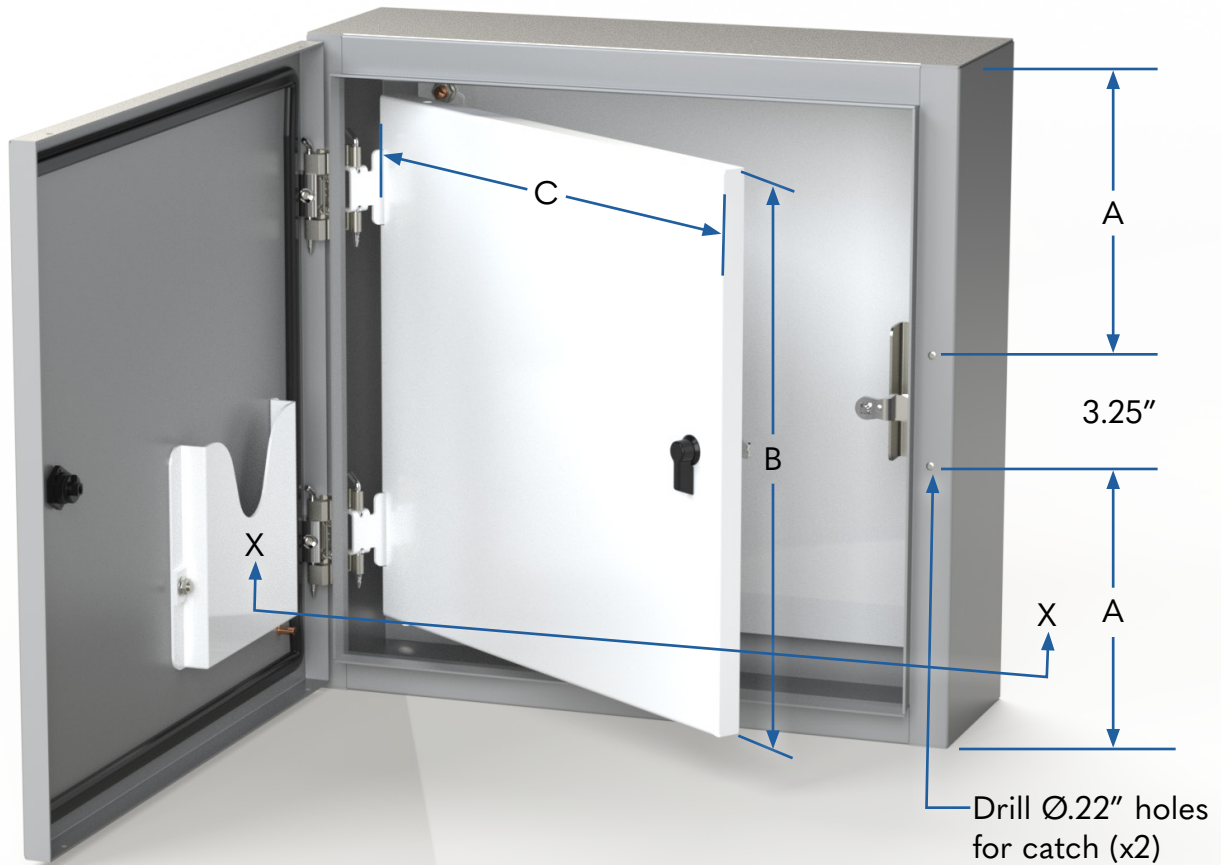

Enclosures Height > 16 " - 20 "

Dead Front Panel Size:

$$A = (\text{Encl. Height} - 3.25") / 2$$

$$B = (\text{Encl. Height} - 4.00")$$

$$C = (\text{Encl. Height} - 3.19")$$

Enclosures Height ≤ 16 "

Dead Front Panel Size:

$$A = (\text{Encl. Height} - 3.25") / 2$$

$$B = (\text{Encl. Height} - 3.50")$$

$$C = (\text{Encl. Height} - 3.19")$$


Bolt Pack:

115170

Note:


If enclosure height ≤ 12 " you should convert to ELJ style enclosure and dead front.

EL LP ≤ 20 " DEADFRONT

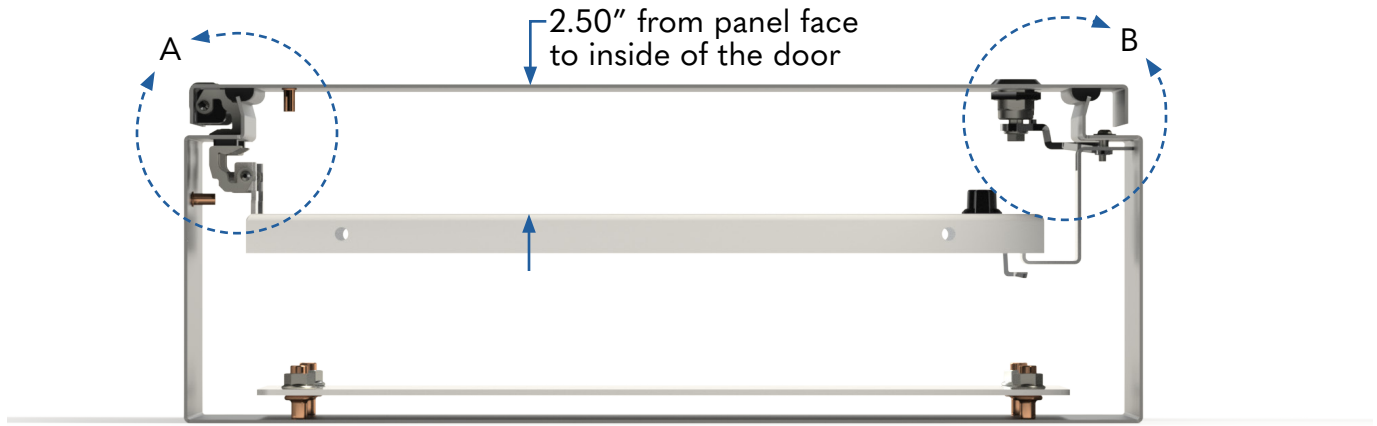


Section X-X


View shown with doors and dead front panels closed

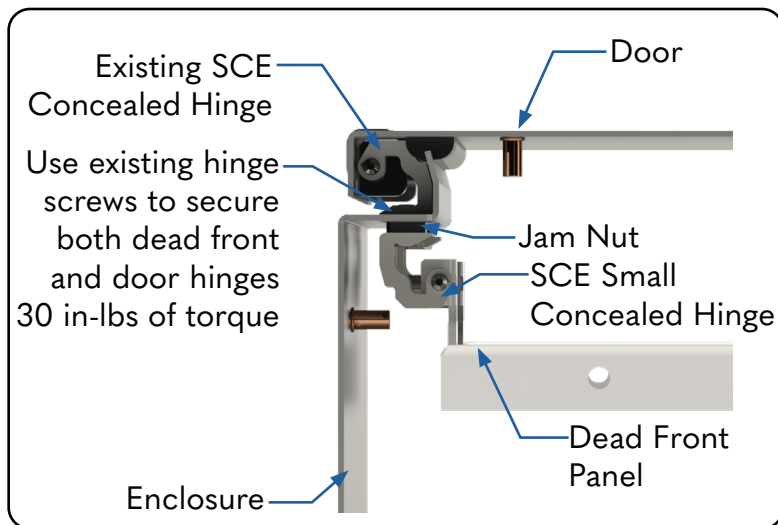


Detail A

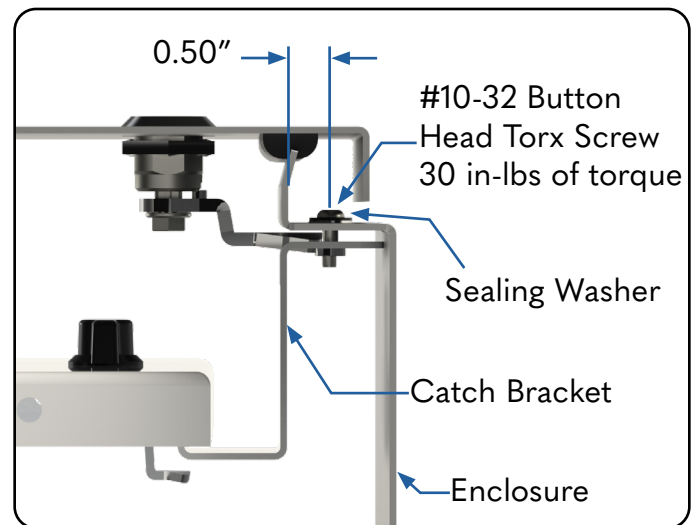

Detail B

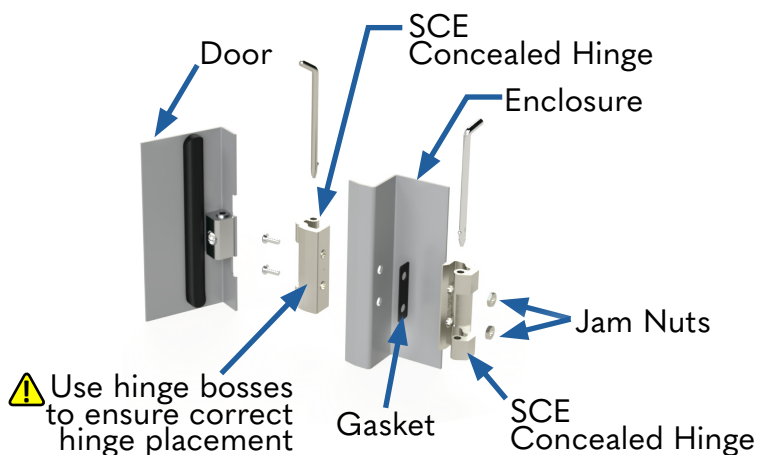

Dead Front Hinge Detail

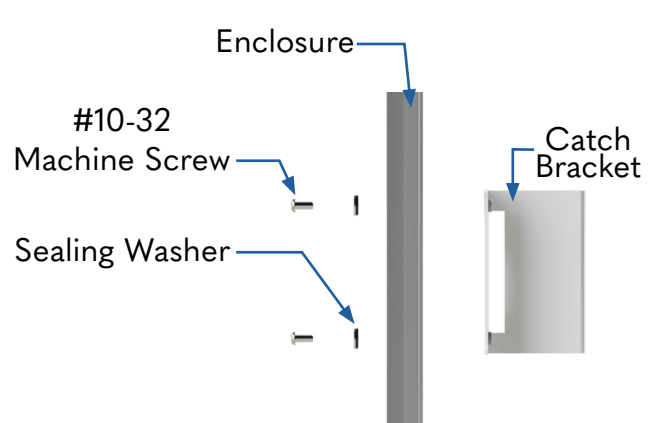

Catch Bracket Hardware Orientation