



# H LP DEADFRONT

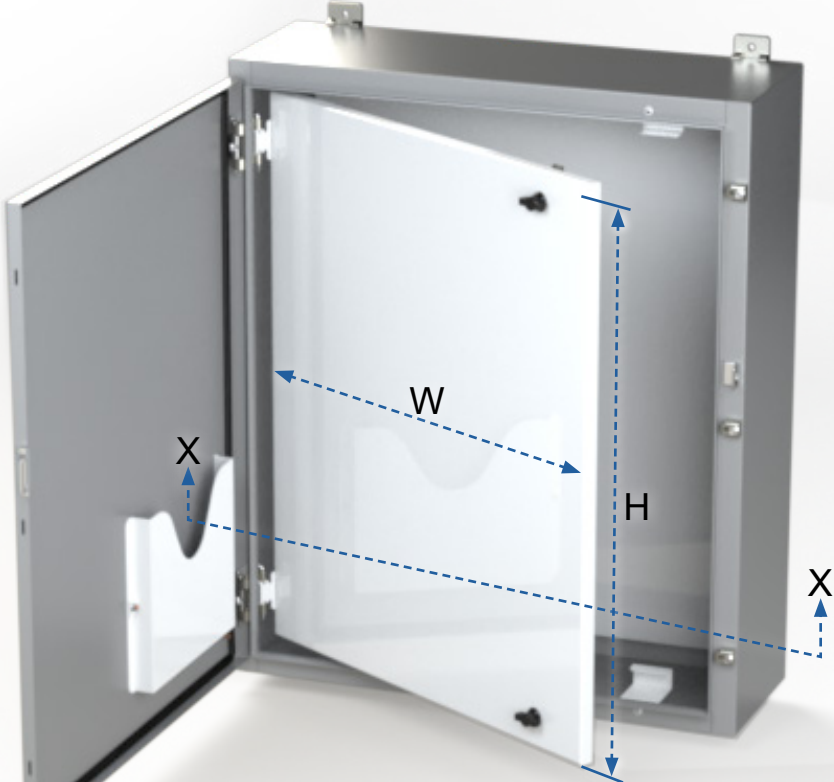

Dead front panel size:  
H = Door opening height - 1.10"  
W = Door opening width - 0.397"

Bolt pack:  
113346 for 2 hinge dead fronts  
113347 for 3 hinge dead fronts  
113348 for 4 hinge dead fronts

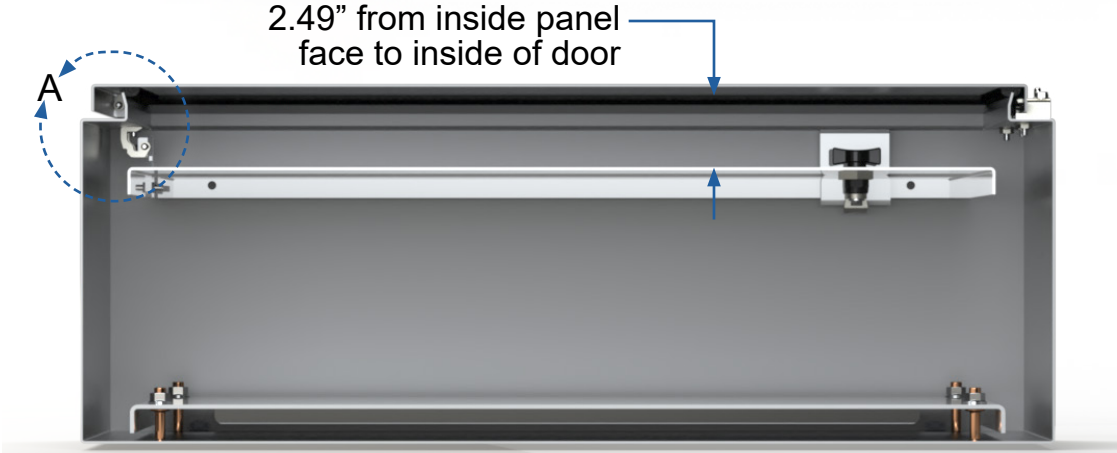

Bottom view section X-X  
View shown with doors and dead front panels closed




Drill  $\text{Ø}.218$ " hole for 10-32 button head torx screw.  
18-24 ft-lbs of torque

4.19" from opening




.575" from flange

Catch bracket

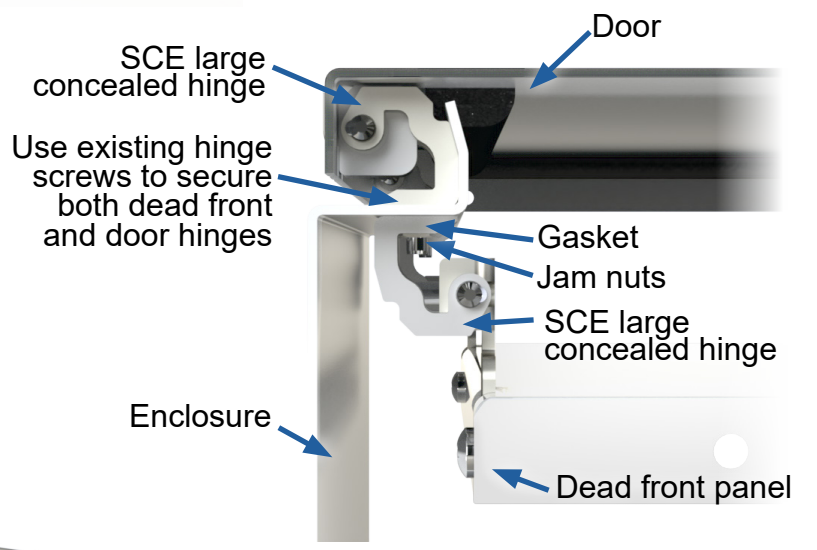

Detail A

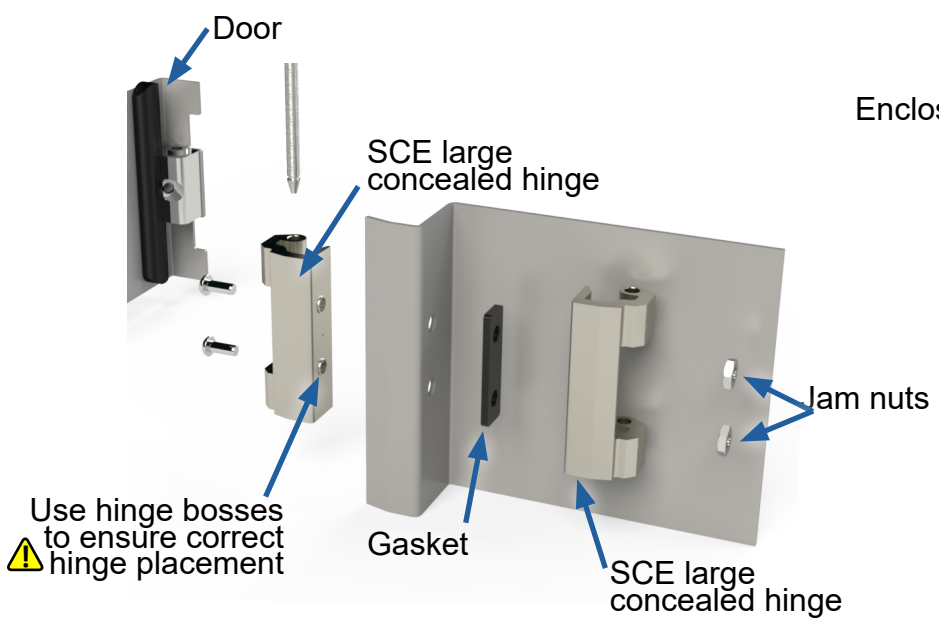

Deadfront Hinge Detail

Use hinge bosses to ensure correct hinge placement