

OK SERIES TOP, BOTTOM, & FRAME INSTALLATION

OK BOM		
Item	Qty	Part Description
1	1	Top Element
2	1	Bottom Element
3	4	Vertical Frame Uprights
4	16	VITI M8 Screws
5	8	Door Hardware Cutout

Tools Required: Mallet, M8 Torx Bit, Drill or Screwdriver

Installation Instructions:

1. Unpack Components

- 1 pre-assembled base with adjustable cable entry flanges.
- 1 pre-assembled top with a removable panel.
- 4 vertical uprights.

2. Assemble the Base and Uprights

- Place the base (Item 2) on a flat surface.
- Insert each upright (Item 3) into its corresponding slot in the base (Fig. 1).
- **Important:** Ensure all four door hardware cutouts on the uprights are aligned and facing the same direction to correctly position the door (Fig. 2).
- The uprights not used for door mounting purposes will only have 3 cutouts for panel attachment.
- Use a mallet to gently tap each upright into place.

3. Attach the Top Element

- Place the top onto the uprights.
- Tap into place with a mallet (Fig. 2).

4. Secure with Screws

- Use the provided bolt pack (16 M8 screws).
- Fasten screws into each upright corner using a drill and Torx bit (Fig. 3).
- Torque Specifications: 100 in-lbs per M8 screw.

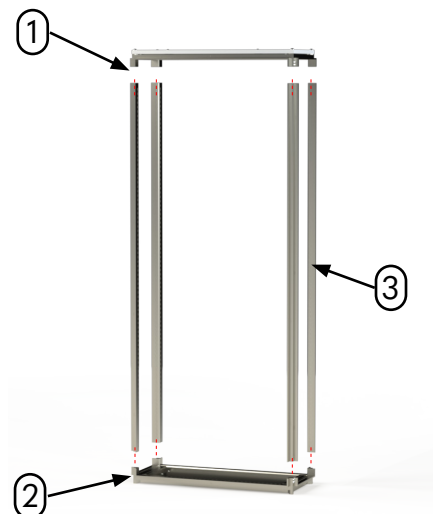


Figure 1

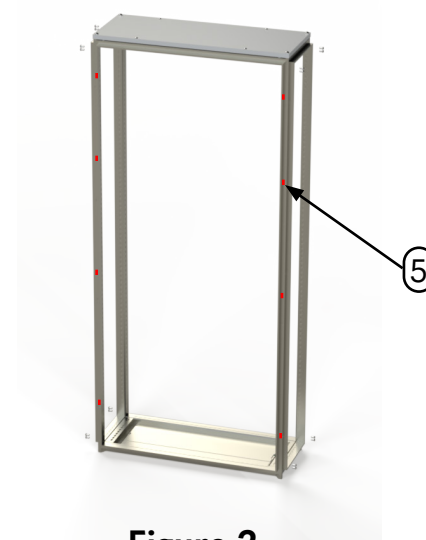


Figure 2

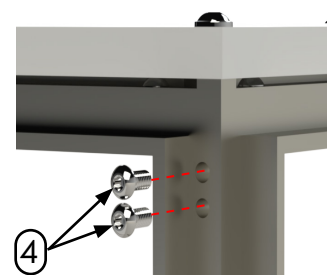


Figure 3

