


# STRIP GASKET INSTALLATION INSTRUCTIONS

1. Thoroughly clean sealing surface of Stainless Steel or Powder Coated enclosure with a 50/50 isopropyl (rubbing alcohol) water mixture, or similar cleaning solvent and wipe dry.
2. Apply firm pressure to the entire bond line for adhesion. For full adhesion, minimum dwell time of 72 hours at 65F or greater.
3. Apply the gasket to the top of the door first (A) from corner to corner.
4. Apply the left (B) and right side (C) gasket tightly against the top gasket and to the bottom of door as shown, locating the hinge side gasket.
5. Apply bottom gasket (D) tightly against right and left gasket.



Door 3/4 view

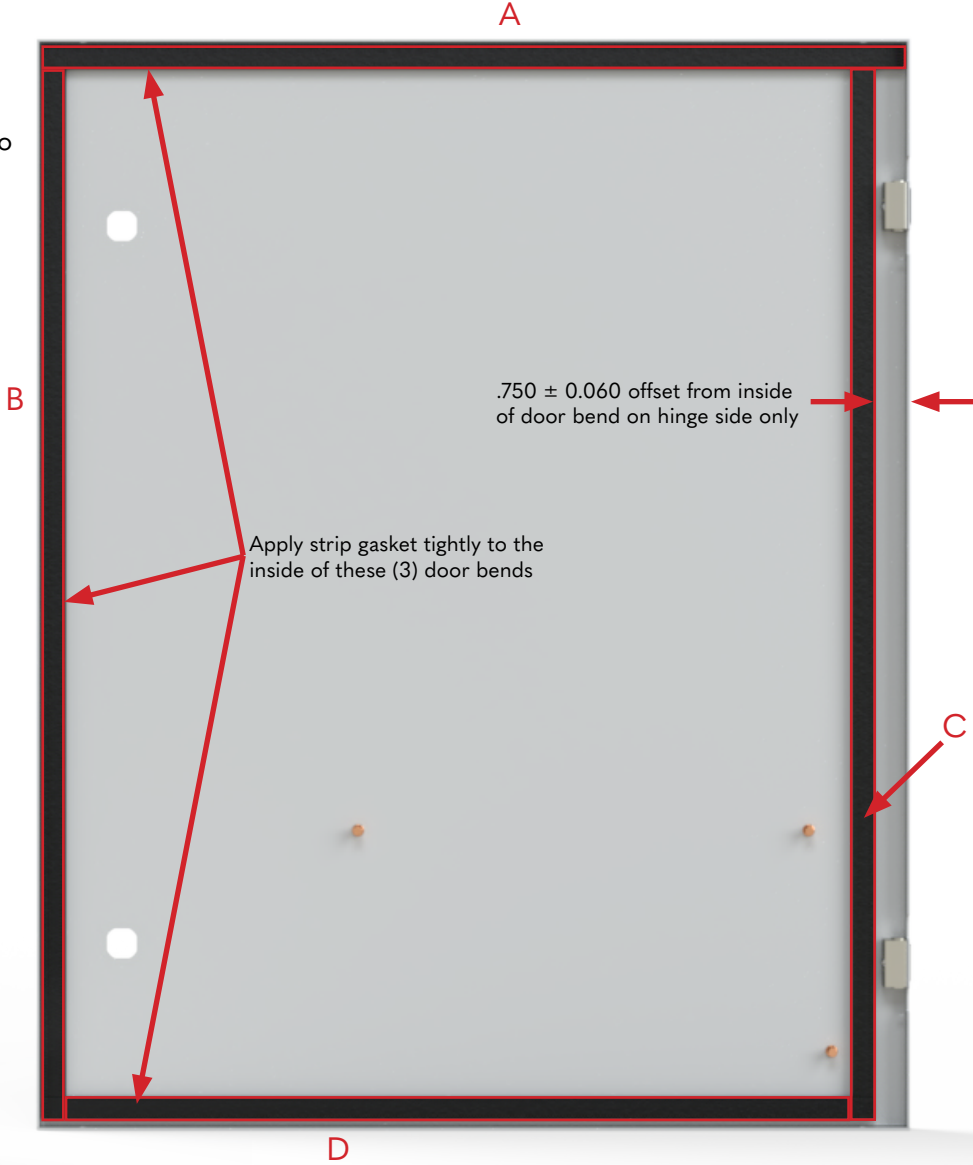

Door interior view  
(Gasket Application)