

# OK SERIES TOP FILLER PLATE INSTALLATION GUIDE

| OK TTP BOM |     |                        |
|------------|-----|------------------------|
| Item       | Qty | Part Description       |
| 1          | 1   | Top Filler Plate (TTP) |


## Top Filler Plate Assembly

**Tools Required:** 8mm Hex Bit or Allen Wrench, Driver or Screwdriver

1. Remove the four M12x20 hex socket screws located at the inner corners where the two OK series enclosures join.
2. Position the TTP top filler plate (Item 1) over the four mounting holes on the OKK top elements.
  - Ensure the TTP flanges face downward.
3. Reattach the previously removed M12 screws to secure the TTP plate to the OKK top elements.
  - See Figure 2 for detailed illustrations.



**Figure 1**

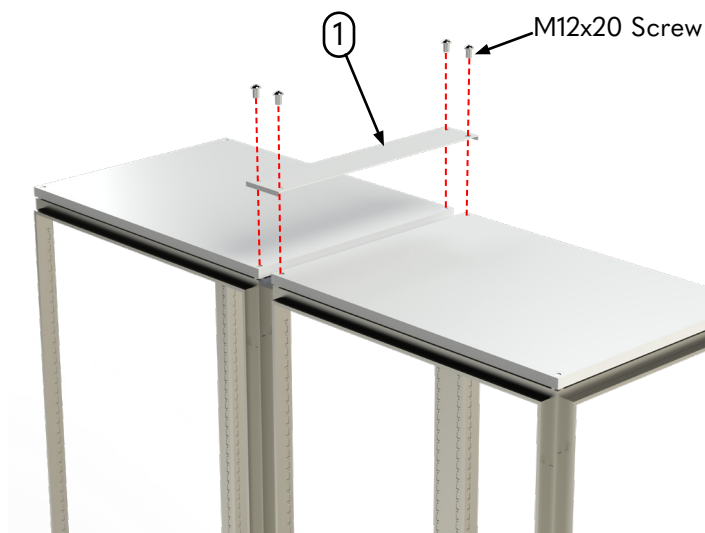

**Figure 2**



*Your Enclosure Source®*